Introduction

The Vault Status Tracker enables the tracking of elements from manufacture to installation. Desktop and mobile screens are more-or-less identical, for this guide we use both.

You will need access to the internet or mobile data when using this app with your camera.

Initial Tracker App Setup

3D SPATIAL INTELLIGENCE

Log in to your Vault account and choose Manage Apps in the left-hand menu. If you cannot see Manage Apps, your permissions level needs to be adjusted, please contact your Project Lead or Vault Support for assistance.

Complete the details, including the required number of steps in your process.

Vertication	VAULT	30 BINATIJAL INTELLIBERICE				Smart Guy 🔒 👻
Part darkbard	APPLICATIONS	=	Create Application			
Polit Right Right Polit Right Right Right Polit Right Right Right Polit Right Right Right Polit Right Right Right Right Polit Right Righ	Asset Overview	~	Application Type			
Paint Code Viewer Nodel Viewer Mark Length / haT Mark Length / haT <td>Data Dashboard</td> <td>~</td> <td>Panel Replacement</td> <td>•</td> <td>Preview</td> <td></td>	Data Dashboard	~	Panel Replacement	•	Preview	
Much Utwar A Aust Indefa / AT Map Utwar A Much Utwar <p< th=""><th>Plan Viewer</th><th>~</th><th>Application Name</th><th></th><th></th><th></th></p<>	Plan Viewer	~	Application Name			
A case bringing / haT Image: Constraint of the Constra		er 🗸				
Austingth//T Wing Uwer File/Marger Statut Statut Statut Dent Tacking Setup File Manger Uwer Manger Uwer Manger Uwer Manger Uwer Imager Agen Imager Agen Imager Agen Imager Agen Imager Agen Imager Agen Imager Agen		~	Map URL or Upload File			
Find Find Find Find Find Find Find Find Find		от 🗸				
Plan Manager Imager Standad Imager Imager Imager	Map Viewer	~	Panel Replacement Point File			
Stated Panel Tracking Setup Manage Sum Color Manage Sum 1		~				
Manage Apps Stark Name Colour 1 Assa abundad Implementation 1 Assa abundad Implementation 1 Assa abundad Implementation 2 Arrine Donke Implementation 3 Find Implementation + App + App	SiteIntel	~	CHOOSE FILE NO THE OPICIADED			
Aurope Comm Aurope Co				Colour		
2 Annea Dada Trad	🛔 Manage Users		1 Not activated	🔲 Light Grey		
+ 400			2 Arrived Onsite	Pink •		
			3 Final	Green		
CRATE CANCEL				+ ADD		
CANCEL CANCEL			_			
			CREATE CANCEL			

Select Panel Replacement

Add the name of your choice

List all the steps your process requires.

Description of Sections

Each section of the tracking process has similar screens, a description of the key components for each is below.

Project Name		
Panel Name / Loc	ation	
1-2-	3 (5)	
Activated Arrived Onsite	Panel Smoke/ Insulation Removed Air Seal Added Added	n New Manager Panel Fixed Confirmation
Smoke Seal Installed		
 Fixings Secure 		
Sealed		
Photos Uploaded		
Filename	Uploaded by	Date Uploaded
photo-1687.jpeg	Uploader Name	02/08/2021, 10:35 AM
Upload Photo		
CHOOSE FILE	2 Files Selected	1 UPLOAD
CHOOSE FILE	2 Files Selected	
	2 Files Selected	
photo-1687.jpeg	2 Files Selected	×

Each stage aligns the construction sequencing process. This can be set or adjusted as required.

Check box criteria for each stage. These must be completed to move to the next stage.

Uploaded images stored with name, time and date for future reference.

Images waiting to be uploaded reside here. You can add/subtract files before uploading to Vault.

Defect reporting. By selecting this link, you will be able to log and comment on defects or issues discovered.

3D SPATIAL INTELLIGENCE

Status Tracker Guide

Status screen

The main Vault screen is a dynamic reporting tool that updates as each stage of the Status Track process is completed.

The information on your mobile device during capture and replacement is replicated on the site desktop computer or tablet.

The right-hand legend denotes the stage each panel is in the process.

1. Activate Your Tracker

The first stage is to activate your panel Status Tracking.

- 1. Scan QR Code with phone
- 2. Push 'Activate' button
- 3. Close window

The panel is now logged as Active on Vault. When it arrives on site, installation photos and comments can be added for tracking and reporting.

APPLIC	ATIONS	=	Panel Scanning Intro	luction												$\langle \rangle \rangle$
† /		~			A. 7	N.N.,	Aλ		.:A.	S/A	A.7	N. N.	ZA A	AA.		$^{-}\lambda$
		~					8			5	5		5 8		Q	X
<u>, 0</u> , ,		~		LEVEL 14	8	8	8	8	8	8	8	8	8		Q 9	$\langle \lambda \rangle$
		^		LEVEL 13	8	8	8	8	8	8	8	8	8	[···		
		Ż		LEVEL 12	8			0	0	8	8	9				X
		~		LEVEL 11	i.					i i		0				$-\lambda$
		~		LEVEL 10						-						$\langle \rangle$
		~			ö	o Ö	Ö	0	0	3		S S	0			$\langle \rangle \rangle$
• •		~		LEVEL 9	8	8	8	8	8	8	8	8	8			ťΛ
		~		LEVEL 8	8	8	8	8	8	8	8	8	8			X
⊕ s		~		LEVEL 7	8	8	8	8	8	8	8	8	8			Δ
				LEVEL 6	9	0		8	9	0	8	0	9			$\langle \rangle$
	SE ASSET	7		LEVEL 5												Δ
1					Ŭ	ŏ	Ŭ	ŏ	0	0	Ö	0	0		Status Legend	$^{\prime}\lambda$
				LEVEL 4	8	8	8	8	8	8	8	8	8	1	Final New Panel Fixed Insulation Added	$\not\leftarrow$
				LEVEL 3	8	8	8	8	8	8	8	8	8	II	SmokelAir Seal Added	λ
				LEVEL 2	8	8	8	8	8	8	8	8	8	f	Anived Onsite	$\left[\right]$
		Ż		LEVEL 1	9			0	0	9		0			Not Activated	X
															Selected	$\vee \lambda$
					A	8	c	D	¢		9	н	с		AXAV	$\langle \rangle$
																$\langle \rangle \rangle$

VAULT NUMBER Smart Guy 🔒 👻 ? POI U16N1/2 Panel Details Click the Artivate button below to activate this PO 3780 tus: Insulation Added It Updated: 18/09/202 🐨 AB17N1/ V LEVEL 26 💿 AB18N1/ W 🐨 A819N1/ LEVEL 25 D AB20N1/ V LEVEL 24 🐨 A821N1/2 @ AB22N1/ LEVEL 23 AB23N1/2 💿 ABZAN1/2 LEVEL 22 AB25N3/ LEVEL 21 BC16N1/ @ BC17N1/2 LEVEL 20 @ 8C18N1/2 LEVEL 19 @ BC19N1/2 BC20N1/ LEVEL 18 ACTIVATE BC21N1/2 LEVEL 17 🐨 BC22N1/

2. Arrived Onsite

Scan the QR code again when receiving panels or loading them into the site lift for placement.

- 1. Scan QR Code with phone
- 2. Select 'Choose File' to take a photo
- 3. Take photo or load picture from file
- 4. Upload photo to Vault
- 5. Click 'Confirm' to move to next stage

Vault State - PINK

3. Panel Removed

Once a panel is removed, a QR code should be attached to the structure. A photo of the structure and inspection must be taken for record keeping. Each stage can have multiple photos uploaded.

- 1. Remove panel
- 2. Affix QR code to structure
- 3. Check confirmation box
- 4. Take photo or load picture from file
- 5. Upload photo to Vault
- 6. Click 'Confirm' to move to next stage *Vault State ORANGE*

Panel Details	6 Accepted 1 of 6
Arrived Onsite Pract Resourced Somewait & Statel Statel Statel Statel Arrived Onsite	
Upload Photo Ox0005E FRUE No file selected Defects Reported Comment Reported by	1 of 6
CHOOSE FILE No file indecend Defects Reported Comment Reported by Date Reported	
Defects Reported Comment Reported by Date Reported	
Comment Reported by Date Reported	
There is a defect with this panel Thomas Urie 09/11/2021, 06:47 am	
	VIEW
REPORT A DEFECT	

Panel Details					
1 Arrived Onsite	2 Panel Removed	3 Smoke/Air Seal Added	4 Insulation Added	5 Install Complete	6 Accepted
Panel Removed					2 of 6
Structure Inspected					
Upload Photo					
CHOOSE FILE	No file selected				
REPORT A DEFEC	т				

Vault State - YELLOW

3D SPATIAL INTELLIGENCE

Status Tracker Guide

4. Smoke / Air Seal Added

Once the smoke seal or air seal are replaced, the QR code on the structure should be scanned and photos attached for records. Multiple photos can be logged into Vault at each stage.

- 1. Scan QR code
- 2. Check confirmation boxes
- 3. Take photo or load picture from file
- 2. Upload photo to Vault
- 3. Click 'Confirm' for the next stage

Vault State - LIGHT BLUE

5. Insulation Added

Once insulation is replaced, the structure QR code should be scanned, and photos attached for records. Multiple photos can be logged into Vault at each stage.

- 1. Scan QR code
- 2. Check confirmation box
- 3. Take photo or load picture from file
- 2. Upload photo to Vault
- 3. Click 'Confirm' for the next stage





6. Install Complete

When installation is complete and all identified defects have been rectified, take a final photo of the finished panel for records. Multiple photos can be logged into Vault at each stage.

- 1. Check confirmation box
- 2. Take photo or load picture from file
- 2. Upload photo to Vault
- 3. Click 'Complete' to finish installation ready for acceptance.

Vault State - BLUE

7. Accepted

Once the install is complete and all identified defects have been rectified, Site Management will provide final sign off and acceptance.

Photos at each stage will be reviewed and accepted. All defects should have been rectified.

1. Review all stages and click 'Approve'

Panel Details					
1 Arrived Onsite	2 Panel Removed	3 Smoke/Air Seal Added	Insulation Added	Install Complete	6 Accepted
Install Complete					5 of 6
Installed as per A	Approved Shop Drawings				
Upload Photo					
CHOOSE FILE	No file selected				
REPORT A DEF	ECT				

					Default User 🤮 👻	?
nel Name: AB	26N5/5					>
Panel Details						
1	2			5		
Arrived Onsite	Panel Removed	Smoke/Air Seal Added	Insulation Added	Install Complete	Accepted	
Accepted					6 of 6	
Click the Approve but	ton blow to approve this panel.					

Vault State - GREEN

Status Tracker Guide

Reporting Defects

When reporting defects, simply open the **REPORT A DEFECT** link and begin typing. Defects always remain open until they have been approved by the relevant party.

Approval ability is indicated by your User Settings. If you cannot approve a defect, please talk with your Status Track administrator.





VAULT



Defect comments added and submitted.

Box stays grey until	Rectify comments
Defect rectified.	added and submitted.

Rectified Defect remains open until approved.

VAULT

rolect Name

VAULT Project Nam 0-0 -0 Panel Smoke/ Removed Air Seal Added Arrived Onsite Smoke Seal Instal Fixings Secure Sealed Photos Uploader Flename phote-1687 (pt Upload Phot OROSE FLE V2021, 10-35 AM 021, 10-35 AM PRIMOUS CONFIRM

Defect Status

If a Defect is recorded, the Phase marker will change from GREEN to RED.

It will stay RED until the Defect is cleared.

Defect comments are shown at each stage where defect is recorded.

The Phase cannot be completed until each Defect is rectified and approved.

If necessary, you can proceed to the next Phase and revisit defect phase to complete.

Requesting Support

?

 \sim

If you would like to **request support**, or encounter any problems while using Vault, click on the **icon** on the far right-hand side of the top navigation bar. Select the appropriate subject, detail your concern, and click the **Send** button.

The **Support Hub** option will take you through to our comprehensive **Knowledge Base**.

art Guy 🎴 👻 🖓		Smart Guy 🔒 👻 🙀
Support Hub	Cheltenh 20 05 Feb 2021, 10 ✓ Request Support	am Beach 🔹
Request Support	Aan	K]
	Subject Request BIM Services	-
	Tide	
	Message	
	Step 1 of 5	
	Map Viewer	
	The Map Viewer showcases geograph from drone surveys.	
	Find high resolution sitched aerial pha a birds eye perspective.	Marsh -
	Skip Tips Or contact our Vault support team on 09 888 4554 CANCEL	SEND
	- Julia	Maungauika